

AN-X3-MOD-MAS
Modicon S908
Remote I/O
Scanner Module

User Manual



A product of Quest Technical Solutions

Sold and Supported by
ProSoft Technology Inc.

www.prosoft-technology.com



Because of the variety of uses for the products described in this publication, those responsible for the application and use of these products must satisfy themselves that all necessary steps have been taken to assure that each application and use meets all performance and safety requirements, including any applicable laws, regulations, codes and standards. In no event will Quest Technical Solutions be responsible or liable for indirect or consequential damage resulting from the use or application of these products.

Any illustrations, charts, sample programs, and layout examples shown in this publication are intended solely for purposes of example. Since there are many variables and requirements associated with any particular installation, Quest Technical Solutions does not assume responsibility or liability (to include intellectual property liability) for actual use based upon the examples shown in this publication.

Current firmware and documentation are at qtsusa.com/dist.

Throughout this manual we use notes to make you aware of safety considerations.

Identifies information about practices or circumstances that can lead to personal injury or death, property damage, or economic loss.

These warnings help to:

WARNING!

- identify a hazard
- avoid the hazard
- recognize the consequences

IMPORTANT!

Identifies information that is especially important for successful application and understanding of the product.

TIP

Identifies information that explains the best way to use the AN-X3-MOD-MAS

Microsoft is a registered trademark of Microsoft Corporation.

Windows is a trademark of Microsoft Corporation.

ControlLogix, RSLinx and RSLogix 5000 are trademarks of the Allen-Bradley Company, Inc.



A product of Quest Technical Solutions
Sold and Supported by
ProSoft Technology Inc.
www.prosoft-technology.com



AN-X3-MOD-MAS MODULE OVERVIEW	7
Hardware Features	8
Package Contents	8
AN-X3 Modes of Operation	9
INSTALLATION	10
Prevent Electrostatic Discharge	10
Power	10
S908 Cabling and Termination	10
Ethernet Cabling	11
CE Installations	11
QUICK START	12
ETHERNET CONFIGURATION	13
Ethernet Configuration	13
DHCP	14
Static IP Address	14
Hostname	15
Firmware	15
Submitting the Configuration	15
Reconfiguring an AN-X from an Unknown State	16
The Configuration File	16
If the link-local address is not accessible...	17
CONFIGURING THE AN-X3-MOD-MAS S908 NETWORK	19
Auto Configuration	19
Manual Configuration	20
RIO Configuration File Contents	21
I/O Modules	21

Sending and Retrieving Configurations	23
Sample RIO Configuration File:	24
Exchanging Scheduled Data with a ControlLogix	25
Configuring the AN-X in RSLogix 5000	25
Mapping I/O Data	28
ClxName	29
ClxPrefix	29
Scheduled Connection Data	29
Swap Option	30
Controlling Program Mode Behaviour	31
Other Mappable Data	31
Other Parameters	35
Sending and Retrieving Configurations	36
Sample Ethernet/IP Configuration File:	37
SCANNING I/O	38
Program/Run	38
Required Connections	38
ControlLogix Alias Tags	38
Using the Ethernet/IP Log	40
Redundancy	40
ControlLogix Ethernet Configuration File	40
Example ControlLogix Configuration for Redundant Applications	42
Aliases	42
Criteria for Switching between AN-X Modules	43
Switchover	43
Other factors to consider...	43
LEDs	44
USING THE WEB INTERFACE	45
Automation Network	46
Configuration	46
View Configuration Files	47
Monitor RIO	48
Monitor Ethernet/IP	50
Log Files	51
Ethernet/IP Log	51
System Info Log	51
View All Logs	51



Administration Menu	52
AN-X IP Configuration	52
DHCP	52
Static IP Address	52
Hostname	53
Firmware Type	53
Submitting the Configuration	53
Diagnostic Capture	53
AN-X Firmware Update	54
AN-X Module Restart	56
Support Menu	56
TROUBLESHOOTING	57
LEDs	57
Ethernet LEDs	57
SYS or MS LED	57
“Railroading” – SYS (or MS) and NET (or NS) LEDs	58
MS and NS LEDs: Runtime	58
Fatal Errors	59
UPDATING THE FIRMWARE	60
SPECIFICATIONS	61
SUPPORT	62
WARRANTY	63



AN-X3-MOD-MAS Module Overview



The AN-X3-MOD-MAS allows an Ethernet/IP Client such as ControlLogix to control Modicon S908 remote I/O.

The module acts as a scanner on the S908 network, reading inputs and writing outputs. The module supports 800 series and Quantum remote drops. It supports up to 32 drops.

The AN-X-MOD-MAS module has a web interface for configuring the module, for monitoring logs, diagnostics and I/O data and for performing administrative functions. You can communicate with the module using any standard web browser such as Chrome or Firefox.

The module firmware can be updated using the web interface. Refer to page 54 for details.

Hardware Features



The module has:

- two LEDs to indicate the status of the connection to the Ethernet (100 and Link/Act)
- an LED to indicate the module's internal state and the state of Ethernet communication (MS or SYS)
- an LED to indicate the state of communications on the S908Remote I/O network (NS or NET)
- an Ethernet connector
- a power connector
- an F connector to connect to the S908 remote I/O network

A watchdog timer is implemented in the module's hardware. If the firmware does not kick the watchdog within the timeout period the watchdog times out and places the module into a safe fatal failure state.

A jabber inhibit timer is implemented in the module's hardware. If the network transmitter is on longer than 150% of the longest network frame time, the transmitter is forced off and the module is placed into a safe fatal failure state.

Package Contents

- AN-X3-MOD module
- 3 pin Phoenix power connector

Current firmware and documentation are at qtsusa.com/dist



A product of Quest Technical Solutions
Sold and Supported by
ProSoft Technology Inc.
www.prosoft-technology.com



Using the MicroSD Card

The AN-X3 microSD card stores configuration data and firmware.

There are no restrictions on the size or speed of the card. The format must be FAT-16 or FAT-32.

The card must be present while the AN-X3 is running.

WARNING! Do not remove the card while the AN-X3 is powered on!

If the AN-X3 is inaccessible from Ethernet because of its settings, you can remove the card and edit the file config.txt. Refer to page 16 for details.

Reinsert the card in the slot at the back of the AN-X3, with the pins facing up.

WARNING! If you remove the card to edit the configuration file, push the card in straight or the card might fall inside the case and you will have to disassemble the AN-X3 to retrieve it (7/64 Allen wrench) .

AN-X3 Modes of Operation

There are two AN-X3 modes of operation:

- Maintenance mode. The AN-X3 runs the maintenance firmware at startup. It performs diagnostics (memory tests, etc), copies any changes from the microSD card. If there are no errors, it starts the AN-X3 in production mode.
- Production mode. This is the normal runtime mode of operation.



Installation

Prevent Electrostatic Discharge

The module is sensitive to electrostatic discharge.


Electrostatic discharge can damage integrated circuits or semiconductors. Follow these guidelines when you handle the module:

WARNING!

- Touch a grounded object to discharge static potential
- Do not touch the connector pins

Power

AN-X requires a DC power input of anywhere from 12 to 24 VDC.

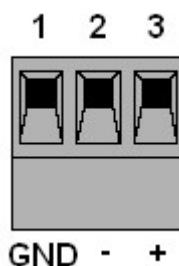

Left to right the pins on the power connector are chassis ground, negative voltage and positive voltage.

The chassis ground should be connected.

Power consumption is 150 mA @ 12VDC or 75 mA @ 24VDC.

The part number for the power connector is Phoenix MSTB 2.5/3-ST-5.08

S908 Cabling and Termination

Refer to the Modicon Remote I/O Cable System Planning and Installation Guide 890 USE 101 00 Version 3.0 for detailed information on cabling and installation.

The module has a standard F connector for connection to the S908 remote I/O network.

The hardware for the AN-X-MOD-MAS and AN-X-MOD-MON contains built-in termination.

When you connect the AN-X-MOD-MAS to the network, it usually replaces a Modicon master and no wiring changes are necessary.

When you connect the AN-X-MOD-MON to the network, you generally can't connect it just like any other node. There's a loss of about 14 dB through a tap to each drop, so if

the AN-X were connected as a drop, there would be a loss of at least 28 dB in the signal from other drops to the AN-X-MOD-MAS, as well as any attenuation along the cables.

Even with the 28 dB loss, in many cases the AN-X-MOD-MON will work, but this is not guaranteed.

The AN-X-MOD-MON should be located at the end of the network trunk. Remove the terminator previously at the end of the network trunk.

If you remove an AN-X-MOD-MON from the S908 network, make sure the network is properly terminated after you remove it.

The AN-X module does not connect the S908 cable to earth ground. If a connection to ground is required, use an F connector grounding block.

Ethernet Cabling

AN-X has a standard RJ-45 connector for connecting to Ethernet.


If you are connecting to the AN-X through a router or switch, use a standard Ethernet cable.

If you are connecting directly between a computer and AN-X, use a crossover cable.

CE Installations

If you are installing the AN-X3 in a location which requires CE, install the following ferrites or their equivalents on the cables, to meet the requirements of radiated emissions at 199.98MHz:

Location	Part number
Ethernet, 10cm from AN-X	Ferrite bead, Fair-Rite 0431173551
Power, 10cm from AN-X	Ferrite bead, Fair-Rite 0431164181
Modicon Coax, 10cm from AN-X	Ferrite bead, Fair-Rite 0431173551

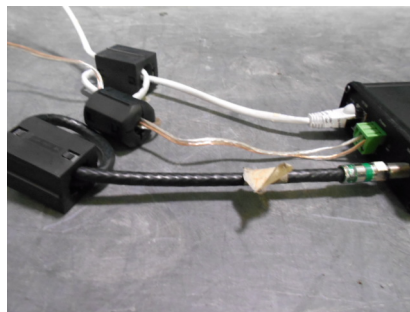

Quick Start

Step	Operation	See page
1	Power up the AN-X, connect it to Ethernet and assign an IP address	13
2	Connect AN-X to the Modicon S908 network	10
3	Use the web interface to Auto Config the AN-X from the attached Modicon network	19
4	Configure the AN-X in RSLogix 5000	25
5	Scan I/O, read inputs and write outputs	38
6	Use the web interface to create aliases for RSLogix 5000	38
7	Import the aliases into RSLogix 5000	38
8	Use the aliases to access the Modicon I/O	
9	Create your control application using the aliases	



Ethernet Configuration

Before you can use the AN-X3-MOD-MAS, you must configure its Ethernet network properties.

Ethernet Configuration

AN-X can be configured:

- to use a static (unchanging) IP address
- to obtain its IP address from a DHCP server
- to use the fixed link-local address 169.254.42.84

All AN-X modules are shipped with the same link-local address 169.254.42.84.

Unless you have control of the DHCP server, in most applications you will assign a static IP address to the AN-X. Otherwise the DHCP server may assign a different IP address each time AN-X powers up, and any software that accesses the AN-X module would have to be reconfigured.

If you are using multiple AN-X modules, connect and configure one at a time, since initially they will all be set to the same link-local IP address.

IMPORTANT!

If you are connecting AN-X to an existing Ethernet network, consult the network administrator to obtain information about how you should configure AN-X or to obtain a static IP address for AN-X.

You configure the Ethernet properties using the web interface.

Start a web browser and enter the address 169.254.42.84

TIP

The AN-X3 must be on the same subnet as the computer to use the link-local IP address. It cannot be connected through a router.



Select *Administration/AN-XIP/FW Configuration*.

Quest Technical Solutions

AN-X3-MOD-MAS MODOCON Remote I/O Master Ethernet/IP Gateway (4.3.3)

Introduction:
This is the main configuration screen for the AN-X2-MOD-MAS product.

Directions:
The main menu, located on the left, provides a list of options that can be configured using this web interface. To see the sub-menus for each item, click on the down arrow icon beside each main option.

Menu Details:

Automation Network:
Configuration

The *AN-X3 Configuration* page appears.

AN-X Configuration

Serial Number: 1a0011fa
MAC Address: 00:0C:1A:00:11:fa

DHCP:
Link-Local:
Static:

AN-X Hostname:

AN-X IP Address:

NET Mask:

Gateway Address:

Firmware Type:

At the top, the screen shows the serial number and MAC address of the AN-X3 being configured.

Check either DHCP or Static.

DHCP

If the AN-X3 finds a DHCP server on the network, it obtains an IP address and other network parameters (netmask and default gateway) from the DHCP server.

To find the address assigned, look at the DHCP server.

When you submit the changes, if the AN-X3 does not find a DHCP server, it reverts to the default link local address 169.254.42.84 and repeatedly flashes the SYS LED 3 times red followed by a pause.

Static IP Address

If you select static IP address, enter:



- the IP address for the AN-X
- the netmask for the AN-X
- the default gateway for your network

You must enter a valid default gateway address even if there is no device at the gateway address on the network.

Hostname

Enter a *Hostname* for the AN-X. This name is used internally by AN-X and may be used to identify the AN-X if you have a DNS server on your network. The name can be from 1 to 30 characters long and should contain only alphanumeric characters, no hyphens or underscores.

TIP

When you configure the AN-X in RSLogix 5000, use this same name for the emulated ENBT. See page 25.

Firmware

Select the firmware the AN-X is to load from the list provided. AN-X builds the list from the firmware files on the microSD card that are compatible with the AN-X hardware.

Current firmware is at qtsusa.com/dist.

Submitting the Configuration

Once you have entered all required parameters, click SUBMIT to write the configuration to the file config.txt on the microSD card. The changes do not take effect until the AN-X restarts.

The following page appears when you click SUBMIT.

The screenshot shows a web interface for configuring the AN-X. On the left is a dark blue sidebar with a navigation menu. The menu items are: Home Page, Automation Network (with a dropdown arrow), Log Files (with a dropdown arrow), Administration (with a dropdown arrow), AN-X IP/FW Configuration (highlighted in light blue), AN-X Firmware Update, AN-X Diagnostic Capture, AN-X Module RESTART, and Support (with a dropdown arrow). The main content area has a dark blue background with the title 'AN-X IP Configuration' in white. Below the title, there is a white text box containing the message: 'To apply these changes a reboot is required. press continue to reboot'. Below this message is a white button with the text 'Continue' in black.

Click *Continue* to restart the AN-X3, then wait until the AN-X has completely restarted before continuing.



If you have changed the IP address, you will have to enter the new IP address in the browser's address field.

Reconfiguring an AN-X from an Unknown State

It sometimes happens that an AN-X has been previously configured with an IP address that causes it to be inaccessible on the current Ethernet network or the IP address is unknown.

Remove the microSD card and edit the file config.txt using a text editor such as Windows Notepad to set the AN-X3 to the desired configuration.

The Configuration File

The Ethernet configuration and the name of the production firmware file to load are stored in the text file config.txt on the microSD card.

When you perform the *Administration/AN-X Configuration* command from the web interface, it writes the results to config.txt.

Each line consists of a keyword followed by a colon and then a value.

Example:

```
IP: 192.168.1.12
```

Anything after a semicolon on a line is treated as a comment.

Keyword	Possible Values
IP	LOCAL DHCP static IP address
Netmask	Ethernet netmask, used only if IP is a static IP address
DefGtwy	default gateway, used only if IP is a static IP address
Hostname	Ethernet host name, from 1 to 30 characters
Firmware	Firmware file to run at startup, must be present on microSD card

If you edit the file and AN-X3 finds an error during startup, it flashes an error code on the MS LED, see page 57.

Example config.txt files

Example: Link- Local IP address

```
IP: LOCAL
```

```
Hostname: ANXMod
```

```
Firmware: AN-X3-MOD-MAS
```



Example: DHCP

```
IP: DHCP
Hostname: ANXMod
Firmware: AN-X3-MOD-MAS
```

Example: static IP address

```
IP: 192.168.1.14
NetMask: 255.255.255.0
DefGtwy: 192.168.1.1
HostName: ANXMod
Firmware: AN-X3-MOD-MAS
```

If the link-local address is not accessible...

Addresses 169.254.1.0 to 169.254.254.255 are reserved for use on a local network. AN-X3 modules are shipped set to the address 169.254.42.84 for initial configuration. This address is almost always accessible from a computer on the same local Ethernet as the AN-X.

If you cannot access the AN-X3 at address 169.254.42.84 using a web browser, there are two options for setting the AN-X Ethernet parameters.

Option 1: Edit config.txt on the SD card

Turn off power to the AN-X, remove the microSD card, insert it in a card reader in your computer, and edit the file config.txt. Refer to page 7 for details on the file contents.

Replace the microSD card in the AN-X and turn on the power. Confirm that you can access the AN-X at the address you set.

Option 2: Add a route to 169.254.42.84

Open a command prompt window and type

```
route print
```

TIP It may be necessary to start the command prompt as administrator.

The routing table appears

```
=====
Interface List

0x1 ..... MS TCP Loopback interface

0x2 ...00 18 8b c5 9d f7 ..... Broadcom 440x 10/100 Integrated Controller -
Packet Scheduler Miniport
```



A product of Quest Technical Solutions
Sold and Supported by
ProSoft Technology Inc.
www.prosoft-technology.com



```

=====
=====
Active Routes:

```

Network	Destination	Netmask	Gateway	Interface	Metric
	0.0.0.0	0.0.0.0	10.10.0.1	10.10.0.20	20
	10.10.0.0	255.255.255.0	10.10.0.20	10.10.0.20	20
	10.10.0.20	255.255.255.255	127.0.0.1	127.0.0.1	20
	10.255.255.255	255.255.255.255	10.10.0.20	10.10.0.20	20
	64.215.255.122	255.255.255.255	10.10.0.1	10.10.0.20	20
	127.0.0.0	255.0.0.0	127.0.0.1	127.0.0.1	1
	169.254.0.0	255.255.0.0	10.10.0.20	10.10.0.20	20
	224.0.0.0	240.0.0.0	10.10.0.20	10.10.0.20	20
	255.255.255.255	255.255.255.255	10.10.0.20	10.10.0.20	1

```

Default Gateway:      10.10.0.1
=====

```

Persistent Routes:

None

If there is no entry in the network destination column that starts with 169.254.0.0 (highlighted above), add a route using

```
route add 169.254.0.0 mask 255.255.0.0 10.10.0.20 metric 20
```

where 10.10.0.20 is replaced with the IP address of the interface (network card) in your computer that is to communicate with the AN-X3.

Repeat the route print command and confirm that the table now has an entry similar to the one shown.

Now try pinging the AN-X3 at 169.254.42.84. You should now be able to access it using a browser to set the desired Ethernet configuration.



Configuring the AN-X3-MOD-MAS S908 Network

Before you can scan a Modicon S908 remote I/O network, you must configure the network in the AN-X-MOD-MAS.

There are two methods of configuring the S908 remote I/O that the AN-X-MOD-MAS is to scan:

- Auto Config. The AN-X3-MOD-MAS reads the network contents by sending messages to the drops on the attached network and builds a configuration file
- Manual configuration. You build the configuration file using a text editor and send it to the AN-X3-MOD-MAS. Sample RIO and Ethernet/IP configuration files are provided as a starting point.

You can use Auto Config to build an initial configuration file, transfer the file to your computer, edit the file to add features, then perform a manual configuration with the modified file.

It may be useful to duplicate parts of the production drops and racks setup in a lab and build parts of the configuration with Auto Config, then combine the configuration text files.

Auto Configuration

To perform an Auto Config, in the web interface first select *Automation Network/Configuration*.

Home Page	AN-X-MOD-MAS Modicon RIO Configuration
▼ Automation Network	<u>Modicon S908 RIO Configuration Instructions:</u>
Configuration	Configuration operations disrupt Remote I/O and Ethernet/IP communication.
Configuration View	The Ethernet/IP Scheduled Owner MUST be in PROGRAM mode for configuration operations.
Configuration Sample	Caution: Configuration should not be performed while the process is in production mode.
Monitor RIO	The AN-X-MOD-MAS uses two text files for configuration. The RIO configuration text file defines the I/O Drops the AN-X will scan along with I/O module parameters etc. The Ethernet/IP configuration file defines data mapping between the Ethernet/IP Scheduled Owner and the RIO Drops.
Monitor Ethernet/IP	The AN-X-MOD-MAS Module is generally configured with 'Auto Config' which generates RIO and Ethernet/IP config files. Auto Config sends Init messages to all drops. If a drop exists, it replies with it's configuration.
▼ Log Files	The drop's configuration information is used to build the RIO and Ethernet/IP text configuration files. The Auto Config text configuration files may be used as is, or retrieved, modified and sent to the AN-X.
▼ Administration	The AN-X generates a ControlLogix alias tag csv file when it's configured. A link is provided to retrieve this csv file. Use 'Tools/Import/Tags and Logix Comments' in RSLogix5000.
▼ Support	Auto Config
	Configure with modified or manually created text configuration files:
	Select file: <input type="button" value="Choose File"/> No file chosen <input type="button" value="Send RIO Config to AN-X"/>
	Select file: <input type="button" value="Choose File"/> No file chosen <input type="button" value="Send Ethernet/IP Config to AN-X"/>

Click the *Auto-configure Network* button.



AN-X sends messages to all possible drops and builds a configuration based on the replies it receives. AN-X then displays the configuration it generated. AN-X also generates a default ControlLogix data mapping configuration based on the I/O it finds (see page 24).

After the Auto Config is complete the following files are displayed:

- RIO Configuration File
- RIO Configuration Log
- Ethernet/IP Configuration File
- Ethernet/IP Configuration Log
- Auto Configuration Log

Check that all drops and modules have been found.

This can be viewed any time using *Automation Network/ConfigurationView*.

When Auto Config creates configuration files, it includes comments, based on the information in its module database. If you edit the configuration files, update the comments as well.

See page 23 for information on how to transfer the configuration from AN-X and save it to a file.

In the RIO Configuration Log the AN-X displays the I/O modules it has found, as well as a summary for each drop that shows the number of outbytes for the drop, the number of input bytes for the drop, the number of Quantum status bytes for the drop, and the hold time for the drop.

Example:

```
25: Drop 2 [O: 12] [I: 22] [MS: 6] [HT:3]
```

Manual Configuration

Manual configuration is useful when the Modicon network is not attached to the AN-X or when you need something other than the default configuration.

Retrieve the sample configuration files and use a text editor to modify it. The file format is described on page 21.

To send the RIO configuration to AN-X:

1. From the AN-X web interface, select *Automation Network/Configuration*.
2. Use the *Choose File* button to select the configuration file
3. Click the *Send RIO Config to AN-X* button to send the file to AN-X.

AN-X parses the file and shows the configuration file sent along with the configuration log.



RIO Configuration File Contents

The RIO configuration file is a text file that contains all the information required for RIO configuration on the AN-X3-MOD-MAS.

Fields can be separated by any whitespace characters such as spaces or tabs, or by commas.

Anything after a semicolon on a line is treated as a comment. Comments can be inserted at the end of a line or on a separate line.

Refer to page 24 for a sample configuration file.

I/O Modules

The remote I/O configuration file defines the contents of the drops to be scanned on the S908 network.

Begin a drop definition with a line that consists of the keyword Drop, followed by an equals sign and then the drop number, from 1 to 32.

There should be no spaces before or after the equals sign.

Example:

```
Drop=7
```

End the drop definition with a line with just the keyword EndDrop.

Between the Drop and EndDrop lines, enter the rack and slot definitions for the drop.

Begin a rack definition with a line that consists of the keyword Rack, followed by an equals sign and then the rack number, from 1 to 5 for 800 series drops or 1 to 4 for Quantum drops. There should be no spaces before or after the equals sign.

Example:

```
Rack=1
```

After the rack definition, enter the slot definitions. They consist of the keyword Slot, followed by an equals sign and the slot number, a comma, then the keyword Type, an equals sign, and the module type. There should be no spaces before or after the equals sign.

Examples:

```
Slot=4,Type=B804
```

```
Slot=7,Type=ACI_030_00
```

For rack 1, the rack definition line can be omitted. It is required for racks 2 to 5. If there is no explicit Rack definition entry, AN-X assumes the following slot definitions are for rack 1.

There is no EndRack command. If there is more than one rack in a drop, just start the new rack with a Rack definition.

To view a list of supported modules, view a configuration file created by Auto Config. AN-X appends a list of supported modules to the end of the file, as comments. You can



perform an Auto Config even if there is no network attached to the AN-X. It will generate an empty configuration with the module list appended.

Quantum Parameter Data

Some Quantum modules have additional parameters to define configurable properties of the module.

You can send this parameter data by adding a line after the slot definition that contains the length of the parameter data in words and the parameter data itself.

Example:

```
Slot=6,Type=ACO_020_00  
CfgLen=6,0x8001,0x5555,0x0000,0x0000,0x0000,0x0000
```

The leading 0x indicates a hexadecimal number.

Some Quantum discrete output modules, for example, the DRA 840 00, can be configured to either set their outputs to the last value or set their outputs to a user defined value when they lose communication with the network master. To set these modules to hold their last state, add a line after the slot definition that contains the keyword CfgOutLast

Example:

```
Slot=4,Type=DRA_840_00  
CfgOutLast
```

If you use both CfgOutLast and additional numerical parameters, place them on separate lines.

Example:

```
Slot=9,Type=DAO_840_00  
CfgOutLast  
CfgLen=1,0x1191
```

If you do not enter any parameter data, AN-X uses the default parameters from its module database.

Refer to the document *AN-X-MOD-Parameters* supplied with the AN-X for detailed information about parameters for specific Quantum modules.

Drop Hold Time

The drop hold time is sent to a drop to tell it how long it should wait before timing out if it hasn't received a packet from the scanner. The units are 100 ms. The value can range from from 1 to 65535. The default is 3 = 300 ms.

Each time the drop gets a packet from the scanner, it sets the timeout to the drop hold time. If the timeout reaches 0, the drop times out.



The drop hold time is what the drop does, not what the scanner does! If the drop goes offline, the scanner sets the bit in the drop error table immediately.

To set the drop hold time for a drop, add a line immediately after the drop definition that consists of the keyword `HoldTime`, an equals sign, and the value. There should be no spaces before or after the equals sign.

Example:

```
Drop=1,  
HoldTime=3
```

Sending and Retrieving Configurations

To send an RIO configuration file to the AN-X3-MOD-MAS, first select *Automation Network/Configuration* in the web interface.

Click the *Choose File* button and select the file, then click the *Send RIO Config to AN-X* button to transfer the configuration.

To retrieve a configuration from the AN-X3-MOD-MAS, first select *Automation Network/Configuration View* in the web interface.

Select 'Retrieve Current RIO Configuration'.



Sample RIO Configuration File:

```
;QTS AN-X2 MOD RIO Scan Configuration Utility
;Copyright (c) 2005-2016 Quest Technical Solutions
;Auto Config Mod I/O File

Drop=4,
;HoldTime=3, ; Drop Hold Time (x100ms, Default=3)
,Rack=1,
,,Slot=1,Type=CPS_114_xx,;Addr=d4s1,Inp=00,Out=00,AC PS 115/230V 10A
,,Slot=2,Type=CRA_93x_00,;Addr=d4s2,Inp=00,Out=00,RIO DROP S908
,,Slot=4,Type=DDI_353_00,;Addr=d4s4,Inp=04,Out=00,DC IN 24V 4x8 Sink
,,Slot=5,Type=DDO_353_00,;Addr=d4s5,Inp=00,Out=04,DC OUT 24V 4x8
,,,,CfgLen=2,0x0000,0x0000
,,Slot=6,Type=ACI_030_00,;Addr=d4s6,Inp=18,Out=00,AN IN 8CH UNIPOLAR
,,,,CfgLen=1,0x0001
,,Slot=7,Type=ACO_020_00,;Addr=d4s7,Inp=00,Out=08,AN OUT 4CH CURR
,,,,CfgLen=6,0x8001,0x5555,0x0000,0x0000,0x0000,0x0000
EndDrop

Drop=5,
;HoldTime=3, ; Drop Hold Time (x100ms, Default=3)
,Rack=1,
,,Slot=2,Type=B863,;Addr=d5s2,Inp=08,Out=00,REG 4 CH IN B863
,,Slot=3,Type=B872,;Addr=d5s3,Inp=00,Out=08,ANALG 4 CH O B872
,,Slot=4,Type=B804,;Addr=d5s4,Inp=00,Out=02,16-OUT B804
EndDrop
```



Exchanging Scheduled Data with a ControlLogix

A Modicon S908 remote I/O network can contain up to 2048 words of input data and 2048 words of output data (32 drops x 64 words per drop).

Each scheduled connection with a ControlLogix contains at most 250 words of input data and 248 words of output data. In order to be able to scan the largest possible Modicon network, the AN-X-MOD-MAS module supports multiple scheduled connections with a ControlLogix processor over Ethernet.

The AN-X-MOD-MAS module behaves like a 17-slot ControlLogix rack with an ENBT/A module in slot 16 and generic modules in slots 0 to 15.

A ControlLogix processor can open scheduled connections to each of these 16 generic modules. Each scheduled connection consists of up to 248 words of output data from the ControlLogix processor to the AN-X and up to 250 word of input data from the AN-X to the ControlLogix processor.

Each connection can have its own RPI, from 1 to 750 ms.

In general, you should try to keep the number of connections small. There is significant overhead in opening and maintaining each connection.

You map the inputs and outputs for the Modicon I/O modules on the S908 network to these scheduled connections. AN-X can create the mappings automatically or you can create a mapping configuration manually.

You can also have AN-X create the mapping file automatically, then edit the file to better suit your application. For example, in order to make the most efficient use of the available Ethernet bandwidth, you can organize the data so that items that must update quickly are mapped to connections with short RPIs and items that are less time critical are mapped to connections with longer RPIs.

In addition, the AN-X module has diagnostic data that can be mapped to ControlLogix scheduled input data.

The mapping file can also contain options that apply to the entire configuration.

Configuring the AN-X in RSLogix 5000

The AN-X3-MOD-MAS emulates a 17-slot 1756 chassis with an ENBT/A in slot 16 and up to 16 generic modules in slots 0 to 15.

Connections to slots 0 to 14 are used for I/O data; the connection to slot 15 is reserved for diagnostic data (see page 31).

To configure the AN-X3-MOD-MAS in RSLogix 5000:

1. Right click on the ControlLogix Ethernet bridge module that will be communicating with the AN-X and select *Add Module*. Add a 1756-ENBT/A module.



The screenshot shows a Windows-style dialog box titled "Module Properties: EnBtLocal:16 (1756-ENBT 1.1)". It has several tabs: "General", "Connection", "Module Info", "Internet Protocol", and "Port Configuration". The "General" tab is selected. The fields are as follows:

- Type: 1756-ENBT 1756 10/100 Mbps Ethernet Bridge, Twisted-Pair Media (with a "Change Type..." button)
- Vendor: Allen-Bradley
- Parent: EnBtLocal
- Name: AnxModMas (text input)
- Description: (empty text area)
- Ethernet Address:
 - Private Network: 192.168.1. (with a dropdown)
 - IP Address: 10 . 10 . 2 . 121 (with dropdowns for each octet)
 - Host Name: (text input)
- Slot: 16 (dropdown)
- Module Definition (with a "Change ..." button):
 - Revision: 1.1
 - Electronic Keying: Disable Keying
 - Rack Connection: None
 - Time Sync Connection: None
 - Chassis Size: 17

At the bottom, the status is "Running". Buttons for "OK", "Cancel", "Apply", and "Help" are present.

Enter the *Name*. Use the host name you assigned to AN-X when you configured its IP properties. (see page 15)

Set the *Revision* to 1.

Set *Electronic Keying* to *Disable Keying*.

Set the *Rack Connection* to None.

Set the *Time Sync Connection* to None.

Set the chassis size to 17.

Set the Slot to 16.

Set the IP address to match the AN-X module.


Record the *Name* as it is used to create aliases to access the data.

Click OK to accept the module.

2. Add Generic modules for each required connection, usually at least slot 0 for data and slot 15 for diagnostics. Use *Automation Network/View Active Configuration* in the web interface to determine which connections are in use. In RSLogix 5000,



right click on the backplane and select *New Module*. From the *Other* category, select 1756-MODULE and click OK.

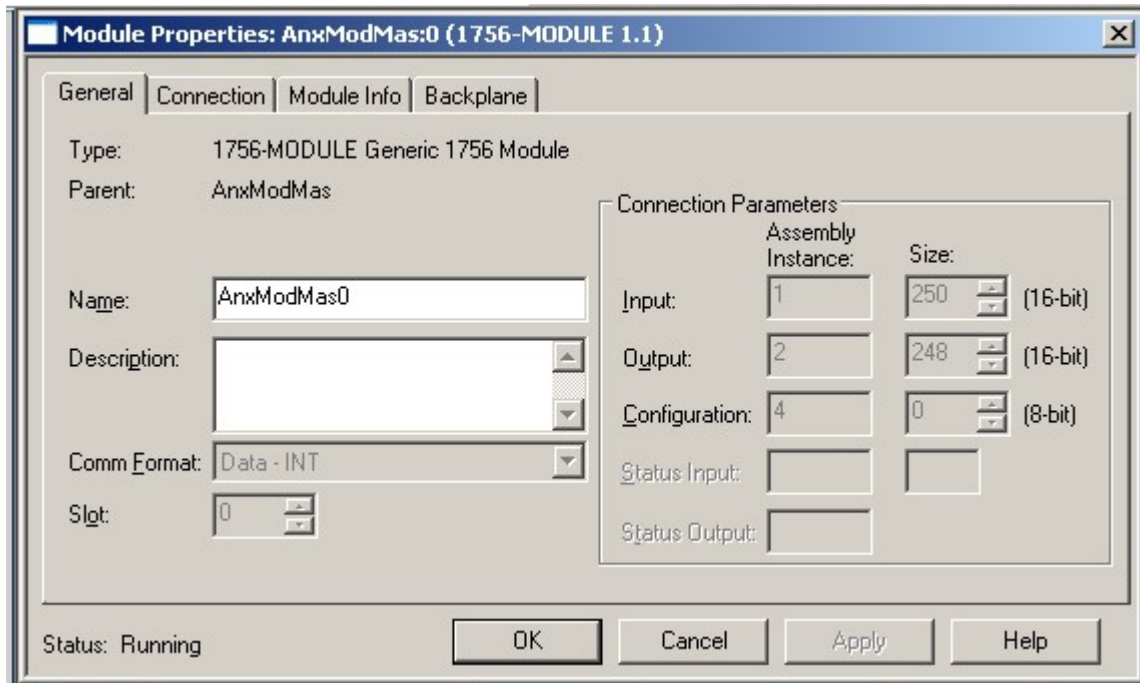


Set the *Name* and *Description* as desired.

Set the *Comm Format* to Data – INT.

Set the other parameters as shown. Set the Slot to 0 for connection 0, 1 for connection 1, and so on.

3. Set the RPI for each connection.

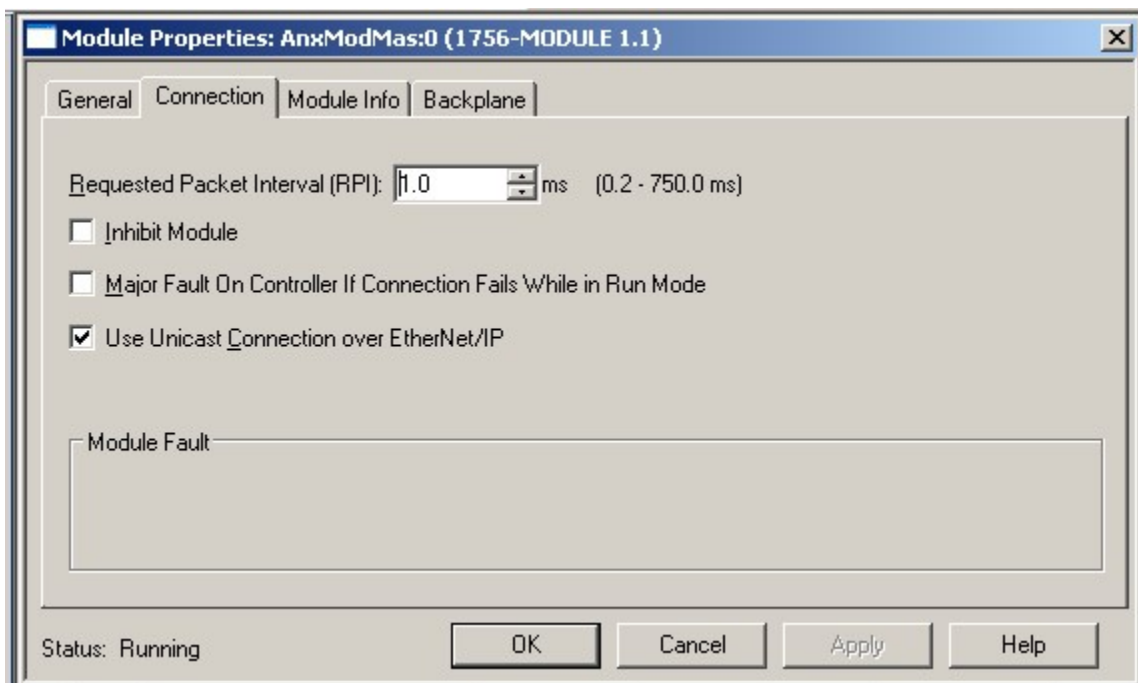

AN-X accepts RPIs from 1 to 750 ms.

Select an RPI appropriate to the remote I/O network scan time and to your application. You can use the diagnostic counters (see page 48) to obtain the remote I/O network scan time.

TIP The AN-X-MOD-MAS supports Unicast connections from the ControlLogix.

TIP Use the web interface of the ENBT module that connects to the AN-X to view the communication loading of the ENBT module.

Mapping I/O Data

You map Modicon input and output data to the ControlLogix scheduled data with a text file that defines the mappings.

The file consists of sections for each scheduled connection. Within each scheduled connection there are definitions for the input and output data for that connection that refer to the Modicon module (drop, rack and slot) where the data is to be found.



When you create a mapping for a module, all the input or output data for the module is mapped; you cannot map individual registers.

AN-X automatically creates a default mapping file when you Auto Config I/O. See page 19 for details.

Anything after a semicolon on a line is treated as a comment.

ClxName

The first line in the file identifies the AN-X module. AN-X uses this name in the ControlLogix tags it creates for the Modicon data. The ClxName definition consists of a line with the keyword ClxName, followed by a comma and the name you gave the emulated ENBT (see page 31)

Example:

```
ClxName, AnxModMas
```

When AN-X automatically creates a configuration file during Auto Config, it uses the Ethernet host name as the default ClxName.

ClxPrefix

The ClxPrefix is used in the tagnames AN-X creates for import into RSLogix 5000. AN-X prefixes each tagname with the ClxPrefix. The ClxPrefix can be used to distinguish tags for the same Modicon address when the ControlLogix processor has connections to more than one AN-X-MOD-MAS.

For example, if the ControlLogix has connections to two AN-X-MOD-MAS modules, each controlling a different Modicon network, both networks could contain modules with the same drop and slot address. Using a different ClxPrefix in the configuration file for each AN-X-MOD-MAS makes the tags for the two modules distinct.

The ClxPrefix consists of a line with the keyword ClxPrefix, followed by a comma and the prefix text.

Example:

```
ClxPrefix,MOD_
```

Scheduled Connection Data

Each scheduled connection to the AN-X begins with a line that consists of the keyword ClxSlot followed by a comma and then a number from 0 to 15

Example:

```
ClxSlot, 0
```

Each scheduled connection consists of output data and input data.

Scheduled outputs from the ControlLogix processor for that connection begin with a line with just the keyword DataOutput.

Scheduled inputs to the ControlLogix processor for that connection begin with a line with just the keyword DataInput.



Data definitions consist of lines that define the mapping between the ControlLogix data table and the Modicon I/O module location (drop, rack and slot).

They consist of lines of the form

CLX_offset (optional), Modicon_Location, tagname

The CLX_offset is the offset into the data for the connection. You can select the offset where the data is located or you can leave it out and AN-X will automatically assign the offset. If the offset is omitted, the line must start with a comma.

The Modicon_location consists of an address in the form dxrysz where x is the drop number, from 1 to 32, y is the rack number, from 1 to 5 for 800 series drops and 1 to 4 for Quantum drops, and s is the slot number, from 1 to 16.

If the rack number is 1, the explicit rack number (ry) can be omitted.

Example:

To associate ControlLogix offset 27 with the Modicon module at address drop 4, rack 2, slot 4 and assign it tagname tag1

```
27, d4r2s4, tag1
```

Example:

To map the Modicon module at address drop 14, rack 1, slot 3 to the next available ControlLogix location and assign it tagname tag2

```
,d14r1s3, tag2
```

or, since the rack number is 1, you can also use

```
,d14s3, tag2
```

Example: Simple Configuration File

```
ClxName, AnxModMas
ClxPrefix,MOD_
ClxSlot, 0
DataOutput
,d4s4, Drop4Slot4Outputs
DataInput
,d4s7, Drop4Slot7Inputs
```

Swap Option

For some modules, the data is swapped when it should not be. You can add keyword swap to the mapping to change the bit order.

Example:

```
1, d1s2, d01s2_Out, swap
```



If the module has both inputs and outputs, you can apply swap to the input mapping, the output mapping, or both.

Controlling Program Mode Behaviour

The ControlLogix processor that is the exclusive owner of the connection in slot 0 controls how the AN-X-MOD-MAS module scans the S908 network. For that reason, when you map the data, you must always include a connection to the generic module in slot 0.

When the ControlLogix processor with the exclusive owner connection to slot 0 on the AN-X is in program mode or the connection is stopped, the AN-X stops scanning the S908 network, just as a Modicon scanner would. Even if other ControlLogix processors have exclusive owner connections to other slots on the AN-X and are in run mode, AN-X does not scan the network.

You can override this behaviour by including a line with the keyword ScanModProg in the configuration file. This causes the AN-X-MODMAS module to continue to communicate with the S908 network when the ControlLogix processor is in program mode. Similarly ControlLogix processors with exclusive owner connections to other AN-X slots will also update. If the exclusive owner connection to slot 0 stops, AN-X stops all communication with the S908 network.

WARNING!

The ScanModProg option is included for debugging since it allows inputs to update in the ControlLogix. It is NOT recommended for normal operation. For maximum compatibility with Modicon hardware, it should not be used in normal operation.

Other Mappable Data

In addition to the I/O data, there are other items that can be mapped to connection input data.

For all these items, you can assign an offset for the data within the ControlLogix input data, or you can leave out the offset and let AN-X assign the offset automatically. If you omit the offset, the line must start with a comma.

All items are of the form

offset [optional], ItemKeyword

If you create the ControlLogix configuration automatically when you Auto Config the S908 network, these items are mapped by default to ClxSlot 15.

TIP

If you map the diagnostic data to a separate connection, use a long RPI to reduce the Ethernet traffic, since the diagnostics do not need to be updated as frequently as I/O data.



Diagnostic Counters

The AN-X-MOD-MAS maintains the following diagnostic counters.

Counter	Offset	Description
TxCount	0	Transmitted network frames
RxGood	1	Received frames with good status
RxPrctl	2	Received frames with a protocol error
RxNoise	3	Received frames with a noise error
RxTout	4	Scanner sent a message to a drop but did not receive a reply within the timeout period
RxCrc	5	Received frames with a CRC error
RxOvr	6	Received frames too long
RxAbort	7	Received frames with an abort error
RxShort	8	Received frames too short
RxErrMask	9	Error mask for protocol errors

To map the diagnostic counters, include a line with the keyword `DiagCtrs` in the input section of a connection. This maps all ten diagnostic counters; they cannot be mapped individually.

If you omit the offset, the line must start with a comma.

Examples:

```
,DiagCtrs
10, DiagCtrs ; offset 10
```

To clear the diagnostic counters set bit 0 in word 0 of the output data for connection 15. This clears the diagnostic counters and the connection statistics.

You can also clear the diagnostic counters and connection statistics separately from the web interface.

Scan Status

AN-X maintains a block of five words that show the state of the S908 remote I/O scan.

Scan status consists of:

Offset	Description
0	Scan state, 0 = idle, 1 = monitor, 2 = scanning, 3 = scan halted



Offset	Description
1	Scan counter
2	Init counter, increments when a drop is reinitialized
3	Current scan time, units of 0.1 ms
4	Maximum scan time, maximum in the last 6.5 seconds, units of 0.1 ms

To map the scan status, include a line with the keyword ScanSts in the input section of a connection. This maps all five words; they cannot be mapped individually.

If you omit the offset, the line must start with a comma.

Drop Error Table

The drop error table consists of 2 16-bit words, one bit per drop. Bit 0 of the first word corresponds to drop 1, bit 1 corresponds to drop 2, and so on.

If a configured drop is in error, the bit is 1. If a configured drop is responding correctly, the bit is 0. The bit is 0 for an unconfigured drop.

To map the drop error table, include a line with the keyword DropErr.

If you omit the offset, the line must start with a comma.

Examples:

```
,DropErr
10, DropErr ; offset 10
```

TIP

Map the drop error table to the first two words of input data of each connection. If the connection to the AN-X module is lost, the ControlLogix sets the first 2 words of the connection to FFFF hexadecimal. If your program is monitoring the drop error table, it will see the error bit as set.

Module Health Bits

Each Modicon drop returns 5 words of module health data. Each word corresponds to a rack – the first word corresponds to rack 1, the second corresponds to rack 2, and so on. Bits in the word correspond to a slot.

The bit is 1 for a correctly functioning module and 0 otherwise.

To map the health bits for a given drop, include a line with the keyword ModnHlth, where n is the drop number, from 1 to 32, in the input section of a connection.

If you omit the offset, the line must start with a comma.

Example: To map the health bits for drop 2



```
, Mod2Hlth
20, Mod2Hlth ; offset 20
```

Note: the module health bits do not update if the drop is offline or if the connection to the AN-X module is lost.

Quantum Module Status Data

Quantum modules each return a byte of module status data. Refer to the documentation for each module for details on what the module status contains for a specific module.

There are 8 words of module status data for each rack, up to 32 words for each drop. The status byte for slot 1 is found in the low byte of the first word, the status byte for slot 1 is found in the high byte of the first word, and so on.

The table shows the locations of the Quantum module status byte for each possible location. For example, the byte for rack 3 slot 7 is found at offset 19, low byte.

Rack	Location																Offset
	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	
1	0L	0H	1L	1H	2L	2H	3L	3H	4L	4H	5L	5H	6L	6H	7L	7H	Offset
2	8L	8H	9L	9H	10L	10H	11L	11H	12L	12H	13L	13H	14L	14H	15L	15H	Offset
3	16L	16H	17L	17H	18L	18H	19L	19H	20L	20H	21L	21H	22L	22H	23L	23H	Offset
4	24L	24H	25L	25H	26L	26H	27L	27H	28L	28H	29L	29H	30L	30H	31L	31H	Offset

To map the module status data for a given Quantum drop, include a line with the keyword `dnModSts`, where `n` is the drop number, from 1 to 32, and the length of the module status data, in 16-bit words, in the input section of a connection.

The length must be large enough to include all modules in the configuration. For example, if the last module is in rack 1 slot 3, the size must be at least 2.

If the length is omitted, AN-X uses a default length of 10. If a length of 10 is not large enough to include all modules in the drop, AN-X generates an error when you download the configuration to the AN-X.

If you omit the offset, the line must start with a comma.

Examples:

```
,d4ModSts,17
30, d4ModSts ; offset 30
```

Connection Statistics

The module maintains statistics for each exclusive owner scheduled connection. In the following table, O represents the connection originator (ControlLogix) and T represents the connection target (AN-X).

There are 10 words of connection statistics data for each connection, of which three are used.



Offset	Description
0	Average update time, average of last 32 updates
1	Reserved
2	Minimum update time since last reset of statistics
3	Reserved
4	Maximum update time since last reset of statistics
5	Reserved
6	Reserved
7	Reserved
8	Reserved
9	Reserved

The units for the times are 0.1 milliseconds. A value of 87 means 8.7 ms.

To map the statistics for a given connection, include a line with the keyword ConnStatsn, where n is the connection number, from 0 to 15, in the input section of a connection.

If you omit the offset, the line must start with a comma.

Examples:

```
,ConnStats2
```

```
40, ConnStats2 ; offset 40
```

To clear the connection statistics, set bit 0 in word 0 of the output data for connection 15. This clears the diagnostic counters and the connection statistics.

You can also clear the diagnostic counters and connection statistics separately from the web interface.

Other Parameters

The following options affect the overall operation of the AN-X.

LongInp

800 series drops send inputs only when the data on the drop changes.

To force drops to send all inputs on every scan, include a line that contains just the keyword LongInp

LedModeDebug

There are two modes of operation for the NET or NS LED. Refer to page 35 for details.

RedundEna,MOD_A_

Enable Redundant configuration and specify Redund Prefix



Refer to the AN-X technical note on redundant operation.

Sending and Retrieving Configurations

To transfer a ControlLogix configuration file to the AN-X3-MOD-MAS, first select *Automation Network/Configuration* in the web interface.

Click the *Choose File* button, select the file, then click the *Send Ethernet/IP Config to AN-X* button to transfer the configuration.

To transfer a configuration from the AN-X3-MOD-MAS, first select *Automation Network/ Configuration View* in the web interface.

Select 'Retrieve Current Ethernet/IP Configuration'.



Sample Ethernet/IP Configuration File:

```
;QTS AN-X2 MOD RIO Scan Configuration Utility
;Copyright (c) 2005-2016 Quest Technical Solutions
;Auto Config Ethernet/IP File Ver4.1.14

;ScanModProg
;RedundEna,MOD_A_ ; Enable Redundant configuration and specify Redund Prefix
;LongInp          ; Force drops to send all inputs on every scan
LedModeDebug      ; Not ODVA Compliant, but useful for debugging network

ClxName,AnxModMas
ClxPrefix,MOD_

ClxSlot,0
DataOutput ; ,<ClxBaseTag> Outputs from ControlLogix
; 0,RedundCtl ; Len=1 Redundancy Control
  1,d4s5,d04s5_Out,; Len= 2 DDO_353_00 DC OUT 24V 4x8
  3,d4s7,d04s7_Out,; Len= 4 ACO_020_00 AN OUT 4CH CURR
  7,d5s3,d05s3_Out,; Len= 4 B872 ANALG 4 CH O B872
 11,d5s4,d05s4_Out,; Len= 1 B804 16-OUT B804

DataInput ; ,<ClxBaseTag> Inputs to ControlLogix
  0,DropErr ; *** Always Map to Ofs 0 Since Logix will set to all 1's if AN-X
Connection is lost
  2,d4s4,d04s4_Inp,; Len= 2 DDI_353_00 DC IN 24V 4x8 Sink
  4,d4s6,d04s6_Inp,; Len= 9 ACI_030_00 AN IN 8CH UNIPOLAR
 13,d5s2,d05s2_Inp,; Len= 4 B863 REG 4 CH IN B863

;The following lines map Diagnostics into ClxSlot 15
ClxSlot,15
DataOutput
  0,DiagCtl ; Len=1 Set Bit 0 to clear diagnostic counters

DataInput ; ,<ClxBaseTag> Inputs to ControlLogix
  0,DiagCtrs, ; Len=10 S908 Diagnostic Counters
 10,ScanSts ; Len=5 S908 Scan Status
 15,d4ModHlth,; Len=5
 20,d5ModHlth,; Len=5

;Module Status Byte for Quantum Only
 25,d4ModSts, 4 ;

;ControlLogix Connection Statistics
 30,ConnStats0, ; Len=10
 40,ConnStats15, ; Len=10
```



Scanning I/O

Program/Run

The ControlLogix processor that controls the connection in slot 0 determines how the AN-X3-MOD-MAS module scans the S908 network. For that reason, when you map the data, you must always include a connection to the generic module in slot 0.

When the ControlLogix processor with the connection to slot 0 on the AN-X is in program mode or connection 0 is inhibited or stopped, the AN-X stops scanning the S908 network, just as a Modicon scanner would.

You can override this behaviour by including a line with the keyword ScanModProg in the ControlLogix configuration file. This causes the AN-X3-MOD-MAS to continue to scan the S908 network when the ControlLogix processor is in program mode. Inputs update in the ControlLogix. If you manually change outputs in the ControlLogix, they update in the I/O modules.

If the connection to slot 0 is inhibited or stops, AN-X stops all communication with the S908 network.

WARNING!

The ScanModProg option is included for debugging since it allows inputs to update in the ControlLogix. It is NOT recommended for normal operation. For maximum compatibility with Modicon hardware, it should not be used in normal operation.

Required Connections

All ControlLogix connections that have I/O data mapped to them must be configured and running without errors before the AN-X will scan the Modicon S908 network

Connections that have just diagnostic data are not required connections.

ControlLogix Alias Tags

AN-X uses the Ethernet/IP configuration to create alias tags that can be imported into RSLogix 5000. Use these tags in your RSLogix 5000 program to access the data on the AN-X. Even if the ControlLogix address for a Modicon address changes, all you have to do is re-import the tags to point to the current I/O data.

WARNING!

If you change the Modicon I/O or ControlLogix configuration, re-import tags so that the ControlLogix processor uses the correct addresses.

There are two sets of tag files, one for the exclusive owner connections and one for the input only connections.



In the web interface, select *Automation Network/Configuration View*.

To retrieve the files, select Logix Aliases either Owner or ListenOnly.

```
Ethernet/IP Configuration File:
;QTS AN-X2 MOD RIO Scan Configuration Utility
;Copyright (c) 2005-2016 Quest Technical Solutions
;Auto Config Ethernet/IP File Ver4.1.14

;ScanModProg
;RedundEna,MOD_A_ ; Enable Redundant configuration and specify Redund Prefix
;LongInp          ; Force drops to send all inputs on every scan
LedModeDebug      ; Not ODVA Compliant, but useful for debugging network

ClxName,AnxModMas
ClxPrefix,MOD_

ClxSlot,0

DataOutput ; ,<ClxBASETag> Outputs from ControlLogix
; 0,RedundCtl ; Len=1 Redundancy Control
  1,d4s5,d04s5_Out;; Len= 2 DDO_353_00 DC OUT 24V 4x8
  3,d4s7,d04s7_Out;; Len= 4 ACO_020_00 AN OUT 4CH CURR
  7,d5s3,d05s3_Out;; Len= 4 B872 ANALG 4 CH 0 B872
 11,d5s4,d05s4_Out;; Len= 1 B804 16-OUT B804

DataInput ; ,<ClxBASETag> Inputs to ControlLogix
  0,DropErr ; *** Always Map to OfS 0 Since Logix will set to all 1's if AN-X Connection is lost
  2,d4s4,d04s4_Inp;; Len= 2 DDI_353_00 DC IN 24V 4x8 Sink
  4,d4s6,d04s6_Inp;; Len= 9 ACI_030_00 AN IN 8CH UNIPOLAR
 13,d5s2,d05s2_Inp;; Len= 4 B863 REG 4 CH IN B863

;The following lines map Diagnostics into ClxSlot 15
```

Retrieve [Current Ethernet/IP Configuration](#) [Logix Aliases Owner](#) / [ListenOnly](#)

Importing Tags in RSLogix 5000

To import the tags into RSLogix 5000, you must be offline. Select *Tools/Import Tags* and import the tag file.

Tag Format

AN-X builds the tags from the ControlLogix configuration. Each tag is a ControlLogix alias. For example,

```
ALIAS,"","MOD_d05s4_Out","B804","","AnxMod:0:O.Data[0]"
```

In this example, the tag name is MOD_d05s4_Out. The name is made up of the ClxPrefix and the tagname from the ControlLogix configuration file. If there is more than one word of data for the module, AN-X appends an underscore and a number to the tagname, for example

```
ALIAS,"","MOD_d05r4s4_Inp_0","B863","","AnxMod:0:I.Data[8]"
```

```
ALIAS,"","MOD_d05r4s4_Inp_1","B863","","AnxMod:0:I.Data[9]"
```

```
ALIAS,"","MOD_d05r4s4_Inp_2","B863","","AnxMod:0:I.Data[10]"
```

```
ALIAS,"","MOD_d05r4s4_Inp_3","B863","","AnxMod:0:I.Data[11]"
```



The address is AnxMod:0:O.Data[0]. The address is made up of the ClxName and the data location. The default ClxName assigned by Auto Config is the hostname.

Using the Ethernet/IP Log

If there are problems with scheduled connections to the AN-X, use the Ethernet/IP log to identify the cause.

From the web interface, select *Log Files/Ethernet/IP Log* to display the log. Look for error messages that describe in detail the cause of any problem with the current configuration.

Redundancy

The AN-X3-MOD-MAS includes features to make it easy to enable and disable AN-X I/O scanners. It can be used to implement redundant I/O scanners, redundant controllers, etc.

One AN-X is designated the primary and acts as the scanner; the other is designated the secondary and acts as a backup.

If the ControlLogix decides there is a problem, it takes the primary AN-X offline and the backup takes over.

The backup AN-X constantly monitors the S908 network. When it becomes the primary, it has the current state of inputs, drop status, etc. The ControlLogix processor has access to current I/O data from the S908 network.

The backup AN-X listens to the S908 network when it is told to go online as a scanner. It waits for 10 ms of silence on the network before it takes over. It does not start scanning if it hears another master already online.

The AN-X distribution CD has technical notes that describe in detail the procedure for using redundant AN-X modules.

ControlLogix Ethernet Configuration File

The ControlLogix configuration file has the following elements to support redundancy.

Parameter	Description
RedundEna, RedundPrefix	Must be included at the beginning of the ControlLogix configuration file RedundPrefix is used to create aliases for data
RedundCtl	Must be mapped to the output data for the connection to slot 0
ScanSts	Scan status, can be mapped to the input data for any connection



Parameter	Description
LongInput	Forces 800 series drops to send inputs on every scan
DataOutput, arrayname DataInput, arraynamename	In redundant scanner applications, the array names can be used to creates aliases for the internal ControlLogix arrays used for the data for the connection

RedundEna

Include a line with the RedundEna parameter, followed by a comma and a unique name for the AN-X at the start of the ControlLogix configuration file.

RedundPrefix

The AN-X uses the RedundPrefix when it generates aliases for elements that are unique to each AN-X module, such as diagnostics.

RedundCtl

Map RedundCtl to the output data for the connection to slot 0 in the AN-X.

RedundCtl consists of a single 16-bit word. Only bit 0 is used. To set an AN-X to act as the scanner, set bit 0 to 1. To set an AN-X to act as a backup, set bit 0 to 0.

If the configuration file contains RedundEna, you must map RedundCtl.

ScanSts

ScanSts is an array of 5 INTs that contain information about the current operation. Only the first 3 are used.

Offset	Description
0	Scan state, 0=idle, 1=monitor, 2=scanning, 3=scan halted
1	Scan counter, increments at the start of each scan
2	Init counter, increments whenever a drop is reinitialized
3	Current scan time, units of 0.1 ms
4	Maximum scan time, maximum in the last 6.5 seconds, units of 0.1 ms

Map ScanSts to input data for any connection.

By default, when you perform an Auto Config, AN-X maps ScanSts to the connection for slot 15.

LongInp

Most 800 series drops send inputs only when the inputs change. You can force 800 series drops to send inputs on every scan by including the LongInp parameter in the ControlLogix configuration file. That way, when you switch between AN-X modules, you can be sure that the backup has the latest inputs.



Example ControlLogix Configuration for Redundant Applications

```

RedundEna,MOD_B_ ; Enable Redundant configuration and specify Redund
Prefix
LongInp          ; Force drops to send all inputs on every scan
LedModeDebug
ClxName,AnxB
ClxPrefix,MOD_
ClxSlot,0
DataOutput, outputarray0
    0,RedundCtl1 ; Len=1 Redundancy Control
    1,d4s4,d04s4_Out,; Len= 2 DDO_353_00 DC OUT 24V 4x8
    3,d4s5,d04s5_Out,; Len= 4 ACO_020_00 AN OUT 4CH CURR
    7,d5s2,d05s2_Out,; Len= 1 B810 8-OUT ISO B810
    8,d5s4,d05s4_Out,; Len= 1 B804 16-OUT B804
DataInput, inputarray0
    0,DropErr
    2,d4s3,d04s3_Inp,; Len= 2 DDI_353_00 DC IN 24V 4x8 Sink
    4,d4s6,d04s6_Inp,; Len= 9 ACI_030_00 AN IN 8CH UNIPOLAR
    13,d5s3,d05s3_Inp,; Len= 4 B863 REG 4 CH IN B863
ClxSlot,15
DataOutput
    0,DiagCtl1 ; Len=1 Set Bit 0 to clear diagnostic counters
DataInput, inputarray15
    0,DiagCtrs
    10,ScanSts
    15,d4ModHlth
    20,d5ModHlth
;Module Status Byte for Quantum Only
    25,d4ModSts, 3 ;
;ControlLogix Connection Statistics
    30,ConnStats0
    40,ConnStats15

```

Aliases

The AN-X-MOD-MAS creates aliases that can be imported into RSLogix 5000.

Item	Alias name prefix	Base tag
Unique elements, such as diagnostics	RedundPrefix	ClxName
I/O inputs	ClxPrefix	DataInput name, if present
I/O outputs	ClxPrefix	DataOutput name, if present



Criteria for Switching between AN-X Modules

The ControlLogix processor maintains connections to both AN-X modules. It can monitor data on both AN-X modules and can switch between them based on:

- diagnostic counters
- drop error table
- module health bits

Switchover

To switch between AN-X modules:

1. Set RedundCtl on the backup AN-X to 1. The backup AN-X will not go online while it sees the primary AN-X as master on the network.
2. Set RedundCtl on the primary AN-X to 0. The backup AN-X will now become master on the S908 network.

When you turn on the RedundCtl bit for an AN-X-MOD-MAS module, it waits for 10 ms of silence on the network before it starts scanning as master.

WARNING!

If the RedundCtl bits on both AN-X modules are on, only one will act as master. However, if the bits are set on both AN-X modules and the current master is disconnected from the S908 network, even for a very short period, the backup will take over. When the module that was disconnected comes online, both modules will be master on the S908 network. YOUR APPLICATION MUST ENSURE THAT THE RedundCtl BITS ARE BOTH ON ONLY DURING SWITCHOVER!

Other factors to consider...

Do not use the ScanModProg parameter if you are using redundancy.

Do not set the RedundCtl bits on both primary and backup AN-X modules at the same time, except during switchover.

When you modify the ControlLogix configuration file and add elements, the mapped data may become larger than the maximum for a connection, especially for large I/O networks or for networks with many analog modules. It may be necessary to change some of the mappings. Also, when you add elements, the offsets in the comments generated by the Auto Config will no longer be correct.

Make sure the mappings in the ControlLogix configurations in both AN-X modules are the same. Each AN-X module cannot check the configuration in the other AN-X module.



LEDs

When the AN-X-MOD-MAS is used in redundant mode, the network LED is green when scanning, orange when monitoring and red when there has been an error or during switchover.



A product of Quest Technical Solutions
Sold and Supported by
ProSoft Technology Inc.
www.prosoft-technology.com



Using the Web Interface

The AN-X module contains a webserver capable of communicating with standard web browsers such as Internet Explorer.

Use the web interface to:

- Configure the AN-X, either by Auto Config or manually
- Transfer configuration files to and from the AN-X
- View the results of the configuration
- Monitor I/O and Ethernet diagnostic counters
- Configure the Ethernet settings and select firmware
- Archive the AN-X configuration
- Update the AN-X firmware
- Restart the AN-X
- View AN-X logs

It also contains contact information for support.

To use the web interface, you must know the IP address of the AN-X.

To access the web interface, start your web browser and type the AN-X IP address where you normally enter web addresses in the browser.

Home Page

- Automation Network
 - Configuration
 - Configuration View
 - Configuration Sample
 - Monitor RIO
 - Monitor Ethernet/IP
- Log Files
- Administration
- Support

[Quest Technical Solutions](#)

AN-X3-MOD-MAS MODOCON Remote I/O Master Ethernet/IP Gateway (4.3.3)

Introduction:
This is the main configuration screen for the AN-X2-MOD-MAS product.

Directions:
The main menu, located on the left, provides a list of options that can be configured using this web interface. To see the sub-menus for each item, click on the down arrow icon beside each main option.

Menu Details:

Automation Network:

Configuration

The AN-X-MOD-MAS uses two text files for configuration. The RIO configuration text file defines the I/O Drops the AN-X will scan along with I/O module parameters etc. The Ethernet/IP configuration file defines data mapping between the Ethernet/IP Scheduled Owner and the RIO Drops.

The AN-X-MOD-MAS Module is generally configured with 'Auto Config' which generates RIO and Ethernet/IP config files. Auto Config sends Init messages to all drops. If a drop exists, it replies with it's configuration. The drop's configuration information is used to build the RIO and Ethernet/IP text configuration files. The Auto Config text configuration files may be used as is, or retrieved, modified and sent to the AN-X.

The AN-X generates a ControlLogix alias tag csv file when it's configured. A link is provided to retrieve this csv file. Use 'Tools/Import/Tags and Logix Comments' in RSLogix5000.



A product of Quest Technical Solutions
Sold and Supported by
ProSoft Technology Inc.
www.prosoft-technology.com



The left pane contains commands. Click on the arrows at the left of the main headings to expand or contract the sections.

The contents of the right pane depend on the current command being executed.

Browsers may display cached data rather than rereading data that has changed on the AN-X.

TIP

If you run into a problem where data appears not to have changed, flush the cache in the browser or run the browser in the mode where it doesn't cache data (incognito in Chrome, Private browsing in Firefox and Safari, etc.)

In addition, in most browsers you can reload a page while overriding the cache. For example, you can use Ctrl-F5 in Firefox or Internet Explorer, or Shift-F5 in Google Chrome.

Automation Network

Configuration

Select *Automation Network/Configuration* to Auto Config the AN-X or to send RIO or Ethernet/IP configuration files to the AN-X.

Home Page	AN-X-MOD-MAS Modicon RIO Configuration
<ul style="list-style-type: none"> ▼ Automation Network <ul style="list-style-type: none"> Configuration Configuration View Configuration Sample Monitor RIO Monitor Ethernet/IP ▼ Log Files ▼ Administration ▼ Support 	<p><i>Modicon S908 RIO Configuration Instructions:</i></p> <p>Configuration operations disrupt Remote I/O and Ethernet/IP communication.</p> <p>The Ethernet/IP Scheduled Owner MUST be in PROGRAM mode for configuration operations.</p> <p>Caution: Configuration should not be performed while the process is in production mode.</p> <p>The AN-X-MOD-MAS uses two text files for configuration. The RIO configuration text file defines the I/O Drops the AN-X will scan along with I/O module parameters etc. The Ethernet/IP configuration file defines data mapping between the Ethernet/IP Scheduled Owner and the RIO Drops.</p> <p>The AN-X-MOD-MAS Module is generally configured with 'Auto Config' which generates RIO and Ethernet/IP config files. Auto Config sends Init messages to all drops. If a drop exists, it replies with it's configuration. The drop's configuration information is used to build the RIO and Ethernet/IP text configuration files. The Auto Config text configuration files may be used as is, or retrieved, modified and sent to the AN-X.</p> <p>The AN-X generates a ControlLogix alias tag csv file when it's configured. A link is provided to retrieve this csv file. Use 'Tools/Import/Tags and Logix Comments' in RSLogix5000.</p> <p>Auto Config</p> <hr/> <p>Configure with modified or manually created text configuration files:</p> <p>Select file: <input type="button" value="Choose File"/> No file chosen <input type="button" value="Send RIO Config to AN-X"/></p> <p>Select file: <input type="button" value="Choose File"/> No file chosen <input type="button" value="Send Ethernet/IP Config to AN-X"/></p>



To manually configure the AN-X, first start with the sample configuration files and modify them for your application. Refer to page 21 for details on the file format.

Use the *Choose File* button to select the file.

Select *Send RIO Config File to AN-X* or *Send Ethernet/IP Config to AN-X*.

AN-X parses the files and displays the configurations and the configuration logs.

View Configuration Files

Select *Automation Network/Configuration View* to view or save the RIO configuration file, the Ethernet/IP configuration file, or the alias tag files.



A product of Quest Technical Solutions
Sold and Supported by
ProSoft Technology Inc.
www.prosoft-technology.com



Monitor RIO

Select *Automation Network/Monitor RIO* to display RIO scanner status, diagnostic counters and I/O data.

MOD-MAS Diagnostics and I/O Data Monitor

[Clear Diagnostics](#)
 [Refresh](#)
 Auto Refresh
 Hex

Scan State	Scan	Scan Init	2	Scan Cur	4.2	Scan Max	4.3
------------	------	-----------	---	----------	-----	----------	-----

MOD-MAS Diagnostic Counters									
Tx Count	6886	Rx Good	6885	CRC Err	0	Abort Err	0	Noise Err	0
Tout	5	Overrun	0	RxShort	0	ErrMask	00:0		

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

Drop 4	Rack 1	Slot 1	Scan	Hlth	CPS_114_xx	AC PS 115/230V 10A										
		Slot 2		Hlth	CRA_93x_00	RIO DROP S908										
		Slot 4		Hlth	DDI_353_00	DC IN 24V 4x8 Sink										
		BitSwap	Inp	0	1	2	3	4	5	6	7	8	9			
		0:I.Data[2]	0	2010	0040											
		Slot 5		Hlth	DDO_353_00	DC OUT 24V 4x8										
		BitSwap	Out	0	1	2	3	4	5	6	7	8	9			
		0:O.Data[1]	0	ffff	ffff											
		Slot 6		Hlth	ACI_030_00	AN IN 8CH UNIPOLAR										
		ByteSwap	Inp	0	1	2	3	4	5	6	7	8	9			
		0:I.Data[4]	0	0000	0000	0000	0000	0000	03e8	0000	07cf	005f				
		Slot 7		Hlth	ACO_020_00	AN OUT 4CH CURR										
		ByteSwap	Out	0	1	2	3	4	5	6	7	8	9			
		0:O.Data[3]	0	03e8	0000	0000	07d0									
Drop 5	Rack 1	Slot 2	Scan	Hlth	B863	REG 4 CH IN B863										
		BitSwap	Inp	0	1	2	3	4	5	6	7	8	9			
		0:I.Data[13]	0	0000	0000	ffff	ffff									
		Slot 3		Hlth	B872	ANALG 4 CH O B872										
		ByteSwap	Out	0	1	2	3	4	5	6	7	8	9			
		0:O.Data[7]	0	03e9	03ea	03eb	03ec									
		Slot 4		Hlth	B804	16-OUT B804										
		BitSwap	Out	0	1	2	3	4	5	6	7	8	9			
		0:O.Data[11]	0	aa55												

Checkboxes may be used to choose which drops to display.



S908 Remote I/O Diagnostic Counters

Counter	Description
TX PACKETS	Count of transmitted packets
GOOD RX PACKETS	Count of good received packets
DROP ERRORS	Shows drops in error. Data is displayed in hex, low digit for drops 1-4, and so on
RX CRC ERRORS	Count of received packets with CRC errors
RX ABORT ERRORS	Count of received packets with abort errors
RX NOISE ERRORS	Count of received packets with noise errors
RX PACKET TIMEOUTS	Count of times a packet was transmitted to a drop and no reply was received
RX OVERRUN	Count of received packets with overrun errors
RX PACKET SHORT	Count of received packets that were shorter than expected
RX ERROR MASK	High byte shows the cause of protocol errors, low byte shows drop number. Displayed in hex.
SCAN STATUS	Scan status, idle or scan
RX PROTOCOL ERRORS	Count of received packets that did not make sense in terms of the S908 network protocol
SCAN COUNT	Running count of I/O scans
SCAN INIT	Running count of drops being ininitialized
SCAN TIME	Current scan time, units of 100 microseconds
SCAN MAX	Maximum scan time in the last 6.5 seconds



Monitor Ethernet/IP

Select *Automation Network/Monitor Ethernet/IP* to display Ethernet/IP status and diagnostic counters.

Scheduled Ethernet Diagnostic Monitor

[Clear Counters](#)
[Refresh Counters](#)
 Auto Refresh

TxFrms	TxBusy	RxFrms	RxBusy	EthErrs	ErrType	PrtErrs	PrtType	PrtCon#
54539	0%	47194	3%	0	00	0	SeqMsm	15

Con#	Name	State	RPI	Rx Avg	Rx Min	Rx Max	Rx Tout
0	ClxSlot 0	Active	1.0	1.0	0.7	999.9	128.0
15	ClxSlot 15	Active	100.0	100.2	13.5	999.9	400.0

Ethernet/IP UDP Statistics

The Ethernet/IP Statistics consist of two portions:

- Global counters
- Statistics for each connection

The Global Counters consist of:

Counter	Description
TxFrms	Count of transmitted frames
TxBusy	Percentage of time the transmitter is not idle
RxFrms	Count of received frames
RxBusy	Percentage of time the receiver is not idle
EthErrs	Count of Ethernet errors
EthType	Type of last error
PrtErrs	Count of Ethernet protocol errors
PrtType	Type of last protocol error
PrtCon#	Connection number of last protocol error

The global counters cannot be cleared.

The Connection Statistics consist of:

Counter	Description
Connection number	0 to 15



Counter	Description
Status	Active or Idle
Rx Tout	The receive timeout, calculated from the RPI
Rx Avg	The average of the last 32 update times, in ms.
Rx Min	The minimum update time since the last counter reset, in ms.
Rx Max	The maximum update time since the last counter reset, in ms

Log Files

AN-X maintains various logs to record diagnostic and error messages. Use the *Log Files* menu in the web interface to view these logs.

Ethernet/IP Log

The *Ethernet/IP Log* shows messages and errors associated with the Ethernet/IP operation.

System Info Log

The *System Info Log* records informational messages during startup and normal operation.

View All Logs

Use *View All Logs* to list and view all the AN-X logs. To view a log file, click on the file name.




Administration Menu

The Administration Menu is used to set the AN-X IP address and to view and edit files on AN-X.

AN-X IP Configuration

You can change the AN-X IP configuration from the web interface. This requires that you know the current IP address and can use it to access the web interface.

Select *Administration/AN-X IP Configuration*.

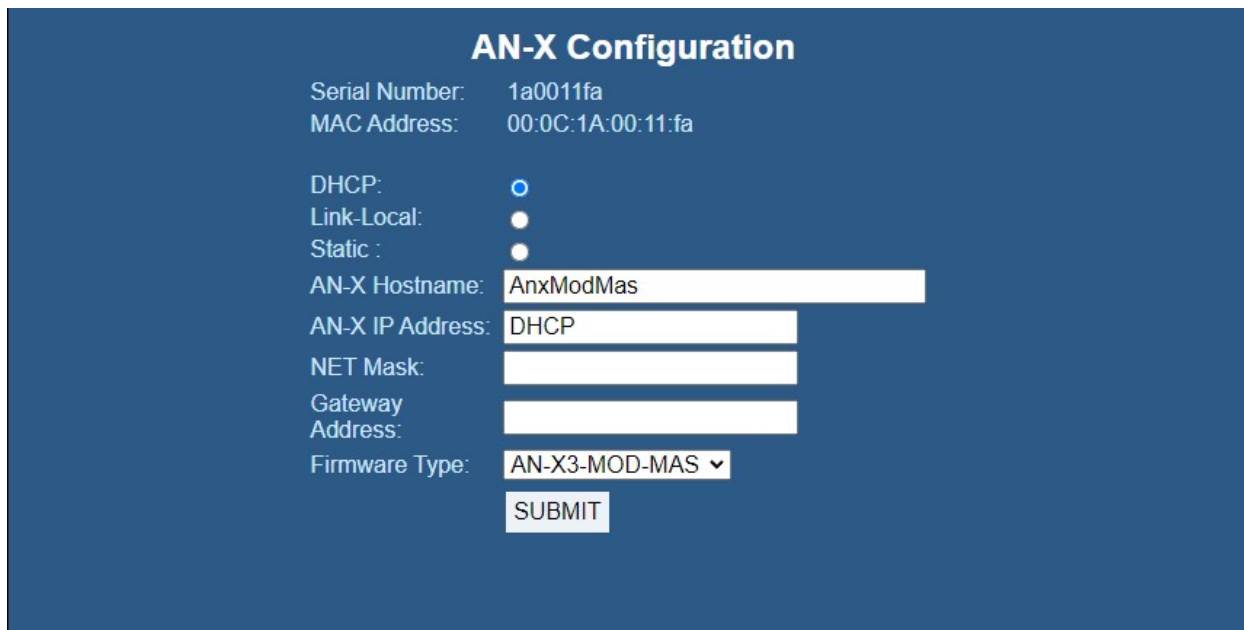

AN-X Configuration

Serial Number: 1a0011fa
MAC Address: 00:0C:1A:00:11:fa

DHCP:
Link-Local:
Static:

AN-X Hostname: AnxModMas
AN-X IP Address: DHCP
NET Mask:
Gateway Address:
Firmware Type: AN-X3-MOD-MAS ▼

SUBMIT

The top of the screen shows the serial number and MAC Address of the AN-X3 being configured.

Check either DHCP or Static.

DHCP

If the AN-X3 finds a DHCP server on the network, it obtains an IP address and other network parameters (netmask and default gateway) from the DHCP server.

To find the address assigned, you have to look at DHCP server.

When you submit the changes, if the AN-X3 does not find a DHCP server, it reverts to the default link local address 169.254.42.84 and repeatedly flashes the SYS LED 3 times red followed by a pause.

Static IP Address

To select a static IP address, enter:

- the IP address for the AN-X.
- the netmask for the AN-X



- the default gateway for your network.

You must enter a valid default gateway address even if there is no device at the gateway address on the network.

Hostname

Enter a *Hostname* for the AN-X3. This name is used internally by AN-X and may be used to identify the AN-X if you have a DNS server on your network. The name can be from 1 to 30 characters long.

AN-X uses the hostname as a default ClxName when you perform an Auto Config. See pages 19 and 29.

Firmware Type

Select the firmware the AN-X is to load from the list provided. AN-X builds the list from the firmware files on the microSD card that are compatible with the AN-X Modicon hardware.

Submitting the Configuration

Once you have entered all required parameters, click SUBMIT to write the configuration to the file config.txt on the microSD card. The changes do not take effect until the AN-X restarts.

Diagnostic Capture

You can archive all the current AN-X configuration files and log files from the web interface. The archive file is a standard tar archive. It intended for technical support only.

Select *Administration/Archive Configuration*.

AN-X Diagnostic Capture

Instructions:

Use the link provided below to retrieve the newly created diagnostic capture file. This file contains all the current configuration information, logs etc.

The archive file is a standard tar file.

This file contains the current configuration, logs and other diagnostic information which is useful for troubleshooting by technical support staff.

Archive File

Click the *Archive File* link. There may be a slight delay while AN-X builds the archive file.

Select the destination where the file will be stored and save the file.




AN-X Firmware Update

Use *AN-X Firmware Update* to transfer a firmware file to the microSD card on the AN-X. Firmware files for the AN-X3 have names that begin with AN-X3 and have extension *.qtf.

WARNING!

Do not update firmware in the AN-X while applications that use the AN-X are running.

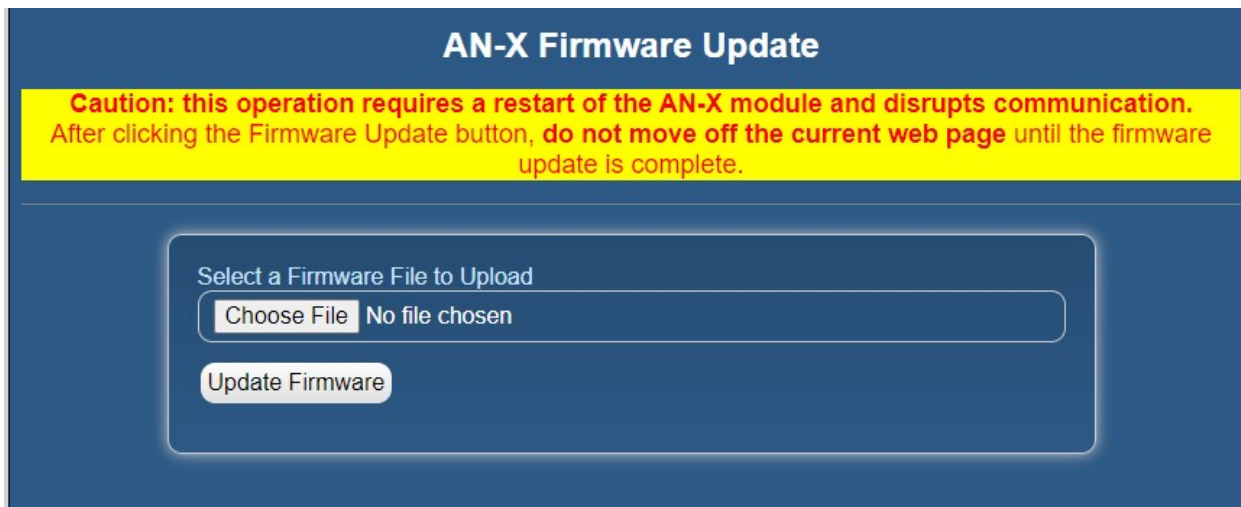

Browse to select the file, then click the *Update Firmware* button to transfer the file.

It is essential that you do not disrupt power while updating firmware, especially maintenance firmware, to the AN-X3 or while the AN-X3 is restarting following a firmware update.

WARNING!

Interrupting power at some points in the update process could render the AN-X inoperative and it will have to be returned to the factory for reinitialization.



AN-X displays progress and status information as the firmware is updated.

AN-X Firmware Update

Caution: this operation requires a restart of the AN-X module and disrupts communication.
After clicking the Firmware Update button, **do not move off the current web page** until the firmware update is complete.

Select a Firmware File to Upload

Choose File AN-X3-MOD-MAS.v4.3.3.qtf

Update Firmware

Sending firmware file, please wait....18% complete

AN-X Firmware Update

Caution: this operation requires a restart of the AN-X module and disrupts communication.
After clicking the Firmware Update button, **do not move off the current web page** until the firmware update is complete.

Select a Firmware File to Upload

Choose File AN-X3-MOD-MAS.v4.3.3.qtf

Update Firmware

Firmware sent ... waiting for validation and copy processes to finish (about a minute)...



A product of Quest Technical Solutions
Sold and Supported by
ProSoft Technology Inc.
www.prosoft-technology.com



When the update is complete, AN-X displays a message that indicates the success or failure of the update.

AN-X Firmware Update

Caution: this operation requires a restart of the AN-X module and disrupts communication. After clicking the Firmware Update button, do not move off the current web page until the firmware update is complete.

Select a Firmware File to Upload

Choose File No file chosen

Update Firmware

Firmware update to AN-X3-MOD-MAS.v4.3.3.qtf was successful.

Click this [RESTART](#) link to restart the AN-X and run the new firmware version

If you have other files to transfer, return to the main page and continue. Otherwise, restart the AN-X in order to run the updated firmware.

AN-X Module Restart

Use the *AN-X Module Restart* command to restart the AN-X module, for example, after changing Ethernet parameters or after updating firmware.

AN-X Module Restart

To restart the AN-X module hit the 'Restart Now' link.

[Restart Now](#)

Warning: Hitting the 'Restart Now' link will cause the AN-X module to restart. All communication with Ethernet/IP and automation networks will be disrupted.

Support Menu

The Support menu contains Contact Information.



A product of Quest Technical Solutions
Sold and Supported by
ProSoft Technology Inc.
www.prosoft-technology.com



Troubleshooting

LEDs

The AN-X3-MOD-MAS has LEDs that indicate the state of the Ethernet connection, the overall module state and the connection to the remote I/O network.

Ethernet LEDs

There are two LEDs that indicate the state of the Ethernet connection.

The upper, yellow LED, labelled 100, is on if the link is running at 100 Mbits/second and is off otherwise.

The lower green Link/Act LED is off if the link is inactive and is on if the link is active. If activity is detected, the link blinks at 30 ms intervals and continues blinking as long as activity is present.

If the AN-X3 is not connected to Ethernet, the 10/100 LED is on.

SYS or MS LED

The SYS or MS LED is used by the AN-X operating system and software to indicate the state of operations and errors. Errors or status indication in boot mode cause the LED to flash yellow. Otherwise, the LED flashes red.

The SYS or MS LED should be used in conjunction with the logs to locate the cause of problems.

In the following, red 3 means three red flashes followed by a pause, and so on.

SYS (or MS) LED State	Possible cause
Red 3	DHCP configuration failed
Yellow 2	microSD card not present
Yellow 3	AN-X3 Maintenance firmware file not found on microSD card
Yellow 4	config.txt file not found on microSD card or error parsing file
Yellow 5	Production firmware filename was not specified in config.txt
Yellow 6	AN-X3 production firmware file not found on microSD card
Yellow 7	Production firmware file invalid or error programming to flash
Yellow 8	Daughterboard mismatch
Yellow 9	Error processing option file or file not found
Yellow 10	Option file mismatch
Flashing red/green	Unscheduled messaging, addressing or connection problem
Flashing red/off	Configuration file problem



“Railroading” – SYS (or MS) and NET (or NS) LEDs

AN-X3 alternates (railroads) flashing the SYS (or MS) and NET (or NS) LEDs to indicate its state.

It railroads the LEDs yellow while it is copying new maintenance or production firmware files from the microSD card to flash memory.

It railroads the LEDs green for 20 to 30 seconds as it starts production mode.

MS and NS LEDs: Runtime

There are two possible runtime LED modes.

Standard mode is the new default mode and is compliant with the Ethernet/IP specification.

IMPORTANT!

Debug mode provides more information about the state of the I/O network.

Debug mode was the mode used in earlier versions of the firmware.

To set debug mode, enter a line with just the keyword LedModeDebug in the ControlLogix configuration file.

When you Auto Config the AN-X, it enables debug mode in the file it creates.

Standard Mode

The MS and NS LEDs are used by the AN-X operating system and software to indicate the state of operations and errors.

In standard mode, the MS and NS LEDs should be used in conjunction with the logs to locate the cause of problems.

Condition	LEDs
All OK	MS Solid Green, NS Solid Green
Missing connections	MS Solid Green, NS Flashing Green
Error event	MS Solid Green, NS Pulses Red
Bad Config	MS Flash Red, NS Flash Green

Debug Mode

SYS or MS LED

The SYS or MS LED is used by the AN-X operating system and software to indicate the state of operations and errors.

The SYS or MS LED should be used in conjunction with the logs to locate the cause of problems.



SYS (or MS) LED State	Possible cause
Flashing red/green	Unscheduled messaging, addressing or connection problem
Flashing red/off	Configuration file problem
Flashing green/off	Not all required connections open

NET or NS LED – Network Status

The NET (or NS) LED shows the status of I/O communication.

Color	Meaning
Flashing or solid red	Network error
Yellow	No configured Modicon I/O
Green	All configured drops are responding Some modules may be in error

Fatal Errors

AN-X3 monitors its operation for “impossible” conditions and generates a fatal error if it detects one. It generates a fatal error code on the SYS (or MS) LED by flashing 8 bits followed by a pause. The least significant bit is first, with green for 1 and red for 0.

If a fatal error occurs, record the SYS or MS LED sequence and contact technical support.



Updating the Firmware

The AN-X3 operating software consists of the maintenance firmware and the runtime firmware.

The maintenance firmware runs at startup. It performs diagnostics, updates any firmware that has been transferred to the AN-X, and starts the runtime firmware.

The firmware files are supplied in files that begin with AN-X3 and have extension *qtf*. They are updated using the web interface. Run the command *Administration/Update AN-X Firmware* and select the file you wish to transfer.

WARNING!

Do not update firmware on the AN-X while applications that use the AN-X are running.

The web page displays the update progress at the bottom left of the page.

You must restart the AN-X3 to run the firmware that you transferred.

WARNING!

It is essential that you do not disrupt power while updating firmware, especially maintenance firmware, to the AN-X3 or while the AN-X3 is restarting following a firmware update.

Interrupting power at some points in the update process could render the AN-X inoperative and it would have to be returned to the factory for reinitialization.

The web interface displays the version of the firmware the AN-X3 is running on the tab at the top of the page.

You can also update the firmware by copying *qtf* files to the microSD card from a computer. If you do, make sure that there is only one version of each *qtf* file on the microSD card, the one you want AN-X to use.



Specifications

Parameter	Specification
Function	Bridge between Ethernet and Modicon S908Remote I/O network
Maximum Power Consumption	150 mA @ 12 VDC or 75 mA @ 24 VDC
Maximum Power dissipation	1.8W
Environmental Conditions:	
Operational Temperature	0-50°C (32-122°F)
Storage Temperature	-40 to 85°C (-40 to 185°F)
Relative Humidity	5-95% without condensation



A product of Quest Technical Solutions
Sold and Supported by
ProSoft Technology Inc.
www.prosoft-technology.com



Support

How to Contact Us: Sales and Support

Sales and Technical Support for this product are provided by ProSoft Technology. Contact our worldwide Sales or Technical Support teams directly by phone or email:

Asia Pacific

Languages Spoken: Chinese, English

[+603.7724.2080](tel:+603.7724.2080), support.AP@prosoft-technology.com

Europe – Middle East – Africa

Languages Spoken: French, English

[+33 \(0\) 5.34.36.87.20](tel:+33(0)5.34.36.87.20), support.EMEA@prosoft-technology.com

North America

Languages Spoken: English, Spanish

[+1.661.716.5100](tel:+1.661.716.5100), support@prosoft-technology.com

Latin America (Brasil)

Languages Spoken: Portuguese, English

[+55.11.5083.3776](tel:+55.11.5083.3776), support.brazil@prosoft-technology.com

Latin America (Spanish Speaking Countries)

Languages Spoken: Spanish, English

[+52.222.399.6565](tel:+52.222.399.6565), latinam@prosoft-technology.com



Warranty

Quest Technical Solutions warrants its products to be free from defects in workmanship or material under normal use and service for three years after date of shipment. Quest Technical Solutions will repair or replace without charge any equipment found to be defective during the warranty period. Final determination of the nature and responsibility for defective or damaged equipment will be made by Quest Technical Solutions personnel.

All warranties hereunder are contingent upon proper use in the application for which the product was intended and do not cover products which have been modified or repaired without Quest Technical Solutions approval or which have been subjected to accident, improper maintenance, installation or application, or on which original identification marks have been removed or altered. This Limited Warranty also will not apply to interconnecting cables or wires, consumables nor to any damage resulting from battery leakage.

In all cases Quest Technical Solutions' responsibility and liability under this warranty shall be limited to the cost of the equipment. The purchaser must obtain shipping instructions for the prepaid return of any item under this Warranty provision and compliance with such instruction shall be a condition of this warranty.

Except for the express warranty stated above Quest Technical Solutions disclaims all warranties with regard to the products sold hereunder including all implied warranties of merchantability and fitness and the express warranties stated herein are in lieu of all obligations or liabilities on the part of Quest Technical Solutions for damages including, but not limited to, consequential damages arising out of/or in connection with the use or performance of the Product.



A product of Quest Technical Solutions
Sold and Supported by
ProSoft Technology Inc.
www.prosoft-technology.com

